



SERIAL NUMBER LOCATION

This document outlines the location of serial numbers for various products offered by RAM.

Contents


Section 1: Trus-T-Lift™ (TTL) Serial Number.....	2
Section 2: Stratus™ Serial Number	4
Section 3: Crystal™ Serial Number.....	5

Section 1: Trus-T-Lift™ (TTL) Serial Number

The serial number can be found in two places.

1. On the inside face of the control panel door

- a. The control panel opens with a key supplied by RAM with every lift. The figure below shows the key slot to open the control panel.

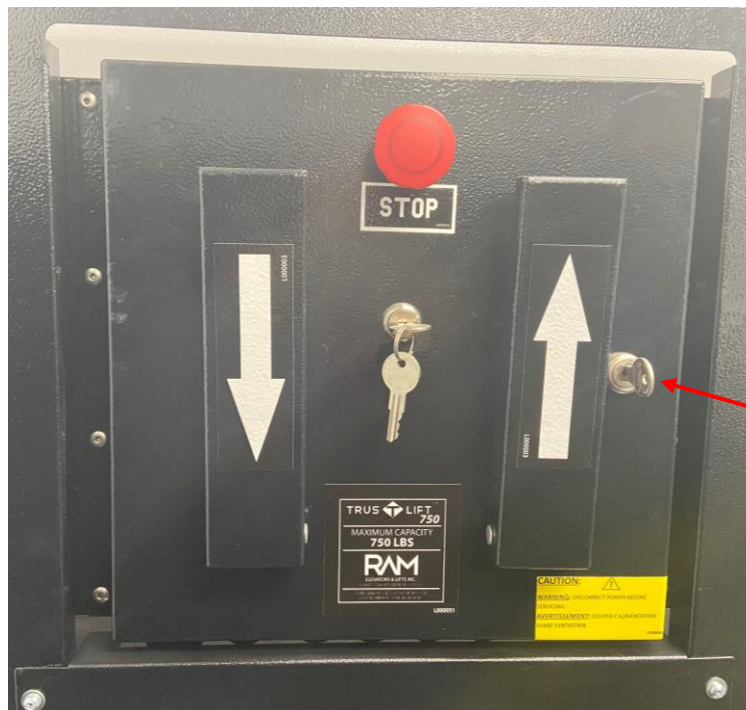

Insert Key here to open control Panel


- b. The figure below shows the inside face of the control panel door. Every TTL serial number starts with TS



Serial number

2. On a yellow sticker on the right side of the tower

a. The figure below shows the sticker

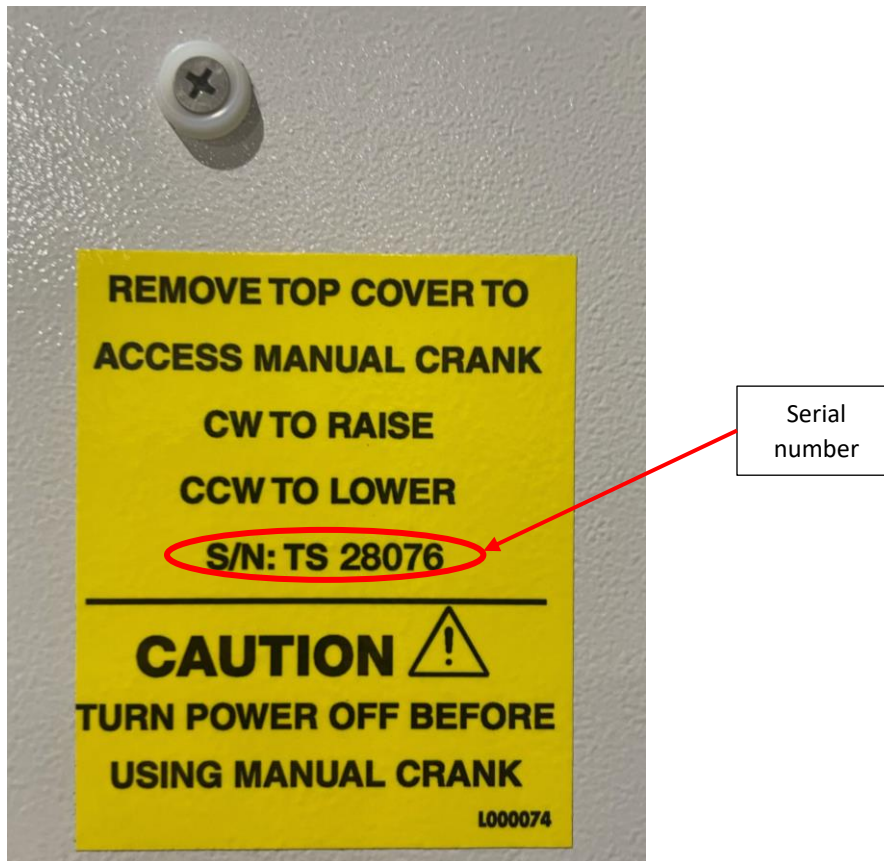


Section 2: Stratus™ Serial Number

1. On the inside face of the controller door
 - a. The control panel opens with a key supplied by RAM with every elevator. The figure below shows the controller.



- a. The figure below shows the inside face of the controller door. Every Stratus serial number starts with RS

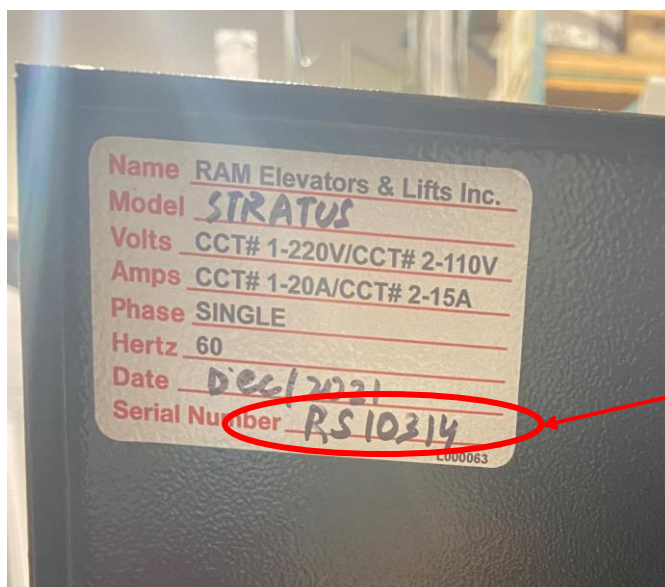

Serial
number

Section 3: Crystal™ Serial Number

1. On the inside face of the controller door
 - a. The control panel opens with a key supplied by RAM with every elevator. The figure below shows the controller.



- b. The figure below shows the inside face of the controller door. Every Crystal serial number is 4 digits.

Name	RAM Elevators & Lifts Inc.
Model	CR800-7214
Volts	CCT# 1-220V/CCT# 2-110V
Amps	CCT# 1-20A/CCT# 2-15A
Phase	SINGLE
Hertz	60
Date	Nov 2021
Serial Number	7214

Serial
number